


# **BICYCLE DELIVERY BASKET**

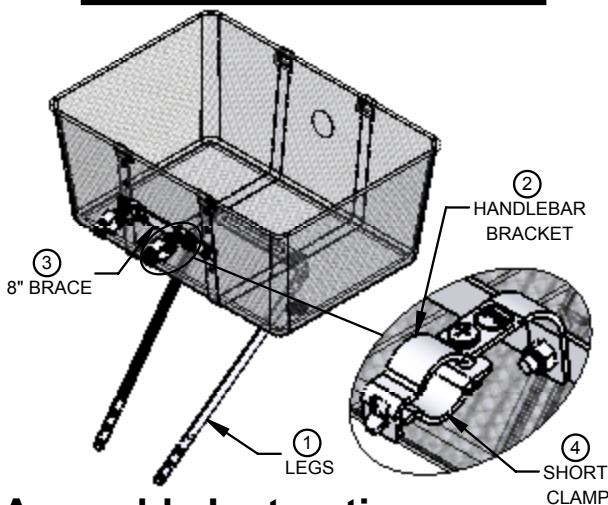

## **Assembly Instructions :**

**IMPORTANT : Flat washers must be used under screw heads.**

- ① Fasten legs to basket with short screws.
- ② Handlebar brackets are mounted to center holes on ③ 8" brace with short screws.
- Attach ③ 8" brace to bands on basket with short screws (Use top holes for 26" bike).
- Fasten basket to handlebar with ④ short clamps using long screws (Flat washers not required). If clamping onto 7/8" portion of handlebar, insert rubber spacer strips between handlebar brackets / short clamps and handlebar.
- Remove front axle nut and assemble basket leg to axle. Replace nut and tighten securely. Repeat for other side.
- Tighten all fittings securely.



0 46307 95701 2

### **⚠ WARNING!**

Overloading of basket may cause difficulty in steering and/or loss of control of bicycle.

**Mfgr. No. 957GB**