

MULTI-FIT FRONT BASKET

2-PIECE ADJUSTABLE LEGS

- Fits most bicycles with 700c, 26", 24" & 20" wheels.

EXTENDED HANDLEBAR CLAMPS

- Allows clearance for shifters, brake levers & cables.

- For mounting to 7/8" & 1" diameter handlebars.


TWO LOWER LEG MOUNTING HOLES

- Large hole for front axle mounting.

- Small hole allows your bicycle dealer to mount to eyelet on several forks with quick-release front hubs.

DURABLE FINISH


- Gloss Black Polyester Powder Coated Finish provides excellent durability.

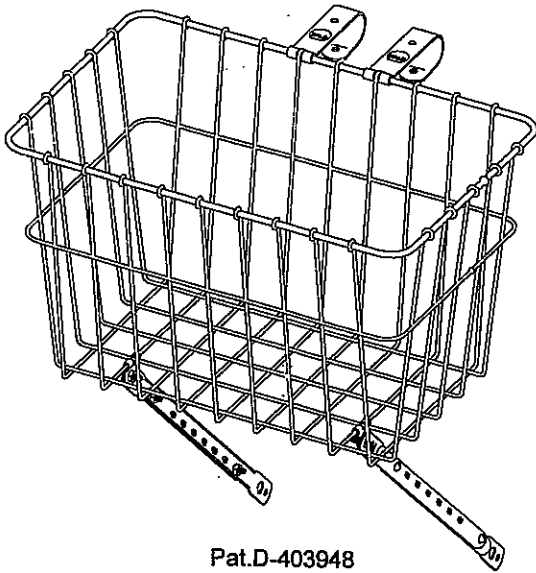

Pat.D-403948


ASSEMBLY
INSTRUCTIONS
ON BACK

Mfgr.No.198GB (Black)
© 2009 Wald LLC
Made in the U.S.A.
No Rev., 5/19/2009

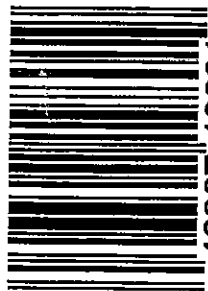

ASSEMBLY INSTRUCTIONS

1. Hook basket clamps ~~over~~ over handlebar on each side of stem. If clamping onto 7/8" diameter handlebar, insert rubber spacer strips between handlebar & clamps. Assemble with 1 1/2" long screws & square nuts. Loosely tighten.

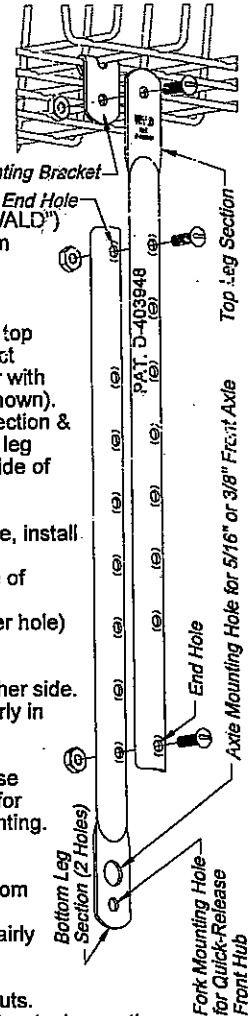

2. Attach top leg section (marked "WALD") to leg mounting brackets on bottom of basket with 1/2" long screws & hex nuts. Loosely tighten.

3. Adjust legs to required length with top leg section to the outside & connect top & bottom leg sections together with 1/2" long screws & hex nuts (as shown).
Note: Use end hole of each leg section & align with adjusting hole in mating leg section. Insert screw through outside of leg with nuts on the inside.

4. When mounting basket legs to axle, install one leg at a time.
 - A. Remove axle nut from one side of wheel.
 - B. Place axle mounting hole (larger hole) on axle.
 - C. Replace axle nut & tighten.
 - D. Repeat steps 4A thru 4C for other side.
 - E. Be sure wheel is aligned properly in fork. If not, loosen axle nut(s), readjust & tighten.

Note: If bicycle has a quick-release front hub see your bicycle dealer for attachment screws & proper mounting.

5. Once legs are installed, position handlebar clamps so that the bottom of the basket does not rub tire or fender. Top of basket should be fairly level.

6. Completely tighten all screws & nuts. Failure to tighten basket screws & nuts, leg section screws & nuts or wheel axle nuts, failure to have wheel quick-release mechanism properly adjusted, could result in loss of control & possible injury. Please consult a bicycle dealer or your bicycle owner's manual for applicable tightening/adjusting requirements.

WARNING!

- DO NOT overload basket. Overloading basket may cause difficulty in steering and/or loss of bicycle control which could result in injury.
- DO NOT bend legs or leg mounting tabs.
- DO NOT mount legs to the inside of the bicycle's front fork blades. Mount only to the outside of the bicycle's front fork blades.
- DO NOT assemble a quick-release front hub through leg holes. The legs are to be mounted to bolt on front axles or to fork eyelets.
- DO NOT use on bicycles with a carbon fiber front fork or handlebar.
- DO NOT use on bicycles with a front suspension or springer fork.